



Tachyon Networks®

Quick Start Guide | TNA-303L-65

System Defaults

Web UI login	root/admin	SSID	tachyon-ptmp
Mode	Station mode	Passphrase	passphrase

Input Power

Input Power	Active PoE (ETH0): 38-57VDC, 0.5A (24W min.)
-------------	--

Manuals & Guides

TNA-303L-65 guides and manuals can be found on the Tachyon Networks Support site, or you can scan the QR code to the right for a link to the operating manual.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: **(1)** This device may not cause harmful interference, and. **(2)** this device must accept any interference received, including interference that may cause undesired operation.



Quick Start Guide | TNA-303L-65

Device access for initial configuration

1. **Power On & Connect** – Use the supplied PoE adapter to power the device

2. **Access the Web UI:**

Wired Access:

- Connect your laptop to the PoE adapter's data port (1G)
- Access the Web UI via the DHCP assigned IP
- If no DHCP is available, try 192.168.1.1 (fallback) or 169.254.1.1 (alternative local IP)

Wi-Fi Access:

- Insert a supported 2.4GHz USB Wi-Fi dongle. Compatible models can be found on the Tachyon support site.
- Connect to SSID: tachyon-mgmt<last 3 eth0 MAC octets> with WPA passphrase: 00000000
- Access the UI at: <http://192.168.5.1>

Default credentials: **root/admin** (change upon first login)

3. **Update & Configure** – Install the latest firmware from the support site. Then, go to Configuration Settings in the main menu and adjust device settings as needed.

For troubleshooting & aiming tips, refer to the **full manual** via the QR code.



LED fast blinking: Device is updating modem firmware.