




QUICK START GUIDE



[Λ] CONTROL™

Before You Begin

Create your free Alta account to manage your Alta devices. Visit **manage.alta.inc** or download the **Alta Networks** app.

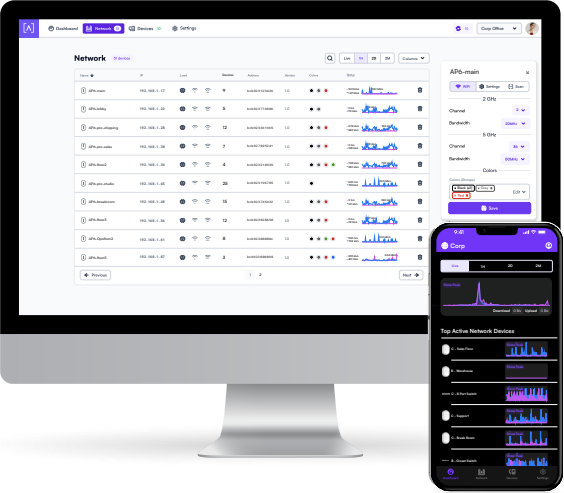

 Download

Package Contents



Control



Mounting Bracket



Mounting Screws
(M3x20mm, Qty. 2)



Anchors
(Qty. 2)



Note: We recommend using the included mounting hardware for product installation.

Installation Requirements

- Ethernet cabling (CAT 5 or above)
- Phillips screwdriver (for mounting)
- Pencil (for marking mounting template)
- Drill and drill bit (for mounting)

Hardware Overview

Top



The Alta Labs logo LED on top of the device flashes as the unit is powered up. Once fully booted, the LED will remain lit unless turned off in the UI. The LED color can also be changed in the management interface.

Bottom



The bottom of the device has padding for desktop placement and notches for mounting.

Front



Port 1 is a standard Gigabit Ethernet port that supports 10/100/1000 Mbps connections. It can be connected to a PoE port on a switch to power the device via Ethernet instead of using the USB-C port on the back.

The LED indicates a 1 Gbps connection when blue and a 10/100 Mbps connection when amber. If the LED is not illuminated, the Ethernet connection is down.

Reset Button Press down for 10 seconds until the LED begins flashing to reset the switch to factory defaults.

Back



USB-C Power Port The device can be powered using a standard USB-C cable (not included) and a standard USB power plug or USB power source (not included).


Hardware Installation

Mounting On A Wall

1. Locate the template included with the Quick Start Guide and Safety document.




2. Position the template in the desired location and use a pencil to mark the holes.



Vertical Mount


or




Horizontal Mount

3. Secure the Mounting Bracket to the wall using the Mounting Screws and a Phillips screwdriver. Be sure to use the screws included with the product.

If mounting on drywall, use the anchors to ensure secure mounting. Use a 6 mm drill bit to drill the holes for the anchors and insert them in the wall.

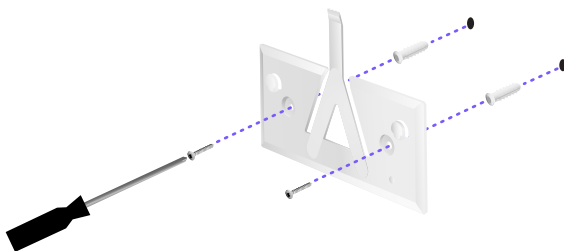


4. Align the switch with the Mounting Bracket.
Note: the Alta Labs A logo should be facing the same position on the mount and the switch. Slide the notches over the tabs to lock the switch into place.

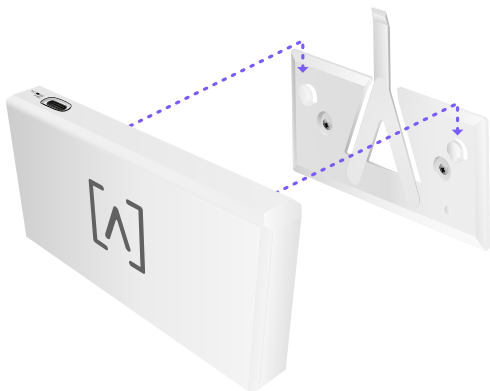

5. Control can be powered over Ethernet or using a USB-C cable (not included).



Whether connecting data only or data + power, connect Control to your network switch using a CAT 5 (or above) Ethernet cable.

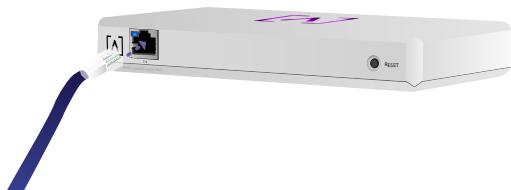

Setting Up Control

Power on Control and allow it a minute to boot. There are two configuration options:

Web Browser

1. Open your web browser and enter the IP address of the Alta Control device. If you don't know it, log in to your router to identify it (or use the mobile app instead for setup).
2. Enter the email address of the administrator of the controller. This user will have the ability to upgrade the controller, add administrator ssh keys, and perform other administrative abilities over the controller.
3. After a few minutes, you should be automatically redirected to the new URL of your controller. It should be something like **`https://1234abcd.ddns.manage.alta.inc`**.



Note: Be sure to bookmark this URL!

If you are not automatically redirected after 5 minutes, your router likely has DNS rebinding protection enabled, and you will need to use the mobile app to set up the device.

If you still want to use the web browser for setup, you can find the hostname for the URL by manually reloading the page, and then adding the hostname to IP address mapping manually on your system (/etc/hosts or on your router).

4. Create a new account on the controller. Be sure to use the same administrator email address that you used in step 2, to unlock administrator abilities for that account.

This account is not tied to your Alta Labs Cloud account at all. However, future releases will allow seamless integration to your Alta Labs Cloud account.

Alta Labs Mobile App

1. If the unconfigured controller isn't automatically presented to you within the app, tap on the **Account** icon on the Dashboard, and then tap on **Controllers**.
2. Once the new controller has been discovered by Bluetooth, enter the email address of the controller administrator. This user will have the ability to upgrade the controller, add administrator ssh keys, and perform other administrative abilities over the controller.

3. Follow the steps within the app to create your first new user on the controller.

This account is not tied to your Alta Labs Cloud account at all. However, future releases will allow seamless integration to your Alta Labs Cloud account.

Setting up APs, Switches, and Routers on Your Control Device

1. Power on your Alta Labs Network equipment and give it time to boot up.
2. Devices that are on the same network as Control will automatically be discovered and presented for setup on your local controller.
3. If your network devices are on a different network than the controller, visit the IP address of the network device in your web browser.
4. Copy and paste the URL of your controller into the device's web site. This should be something like `https://1234abcd.ddns.manage.alta.inc` or `https://local.1234abcd.ddns.manage.alta.inc`

Advanced Notes about Dynamic DNS used by Alta Labs Control

1234abcd.ddns.manage.alta.inc will always resolve to the Internet/WAN IPv4 or IPv6 address of the controller

local.1234abcd.ddns.manage.alta.inc will always resolve to the local IPv4 or IPv6 address of the controller

Both of these hostnames will automatically update if the IP address of the WAN or LAN of the controller changes.

You can port-forward any port on your Internet connection to port 443 of the Control device, and then set network devices around the world to `https://1234abcd.ddns.manage.alta.inc:1234`, following the port you have selected for port-forwarding.

Reverse proxy HTTP support will be supported in a future release.

Certificates for the control device can be altered by modifying the `~alta/server.*` files.

Alta Control™ Specifications

Mechanical	
Dimensions	25.7 x 91 x 180 mm (1 x 3.6 x 7.1")
Weight	.38 kg (.83 lbs)
Material Type	Injection Molded Plastic
Material Finish	Matte
Color	White

Ports	
Network Interface	Ethernet, Bluetooth
Management Interface	(1) GbE RJ45 Port

LEDs	
Network	Orange: 10/100 Mbps, Blue: 1000Mbps

Hardware	
Processor	Quad-core Qualcomm 2.2 GHz
Button	Factory reset
Bluetooth	Yes, Setup

Power	
Power Method	PoE or USB 5V
Supported Voltage Range	42.4-57V DC for PoE, 4.75V to 5.25V for USB
Power Consumption	8W max, 5W typical

Environmental	
Mounting	Wall, Desktop
Operating Temperature	-5 to 50° C (23 to 122° F)
Operating Humidity	5 to 95% Noncondensing
Certifications	CE, FCC, IC

Compliance

Federal Communication Commission Interference Statement

This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operations of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This device is restricted to indoor use.

Non-Modification Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

CAN ICES-003(B) / NMB-003(B)

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED Radiation Exposure Statement:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20cm de distance entre la source de rayonnement et votre corps.

The transmitter module may not be co-located with any other transmitter or antenna.


Le module émetteur peut ne pas être coïmplanté avec un autre émetteur ou antenne.



Community Forum

 forum.alta.inc

Technical Support

 help.alta.inc

All specifications are subject to change without notice.
Alta Labs products are sold with a limited warranty:
alta.inc/warranty

© 2023-2024 Soundvision Technologies. All rights reserved.
Alta Labs is a trademark of Soundvision Technologies.